

How to rock the...

Chora Lush

Thank you for buying the Chora Lush rich chorus with reverb pedal! Below are some ideas to help you understand more about how the Chora Lush can become your most useful pedal for clean and acoustic playing.

Basic Usage

The Chora Lush provides two simultaneous effects combining both chorus and reverb into a single pedal. The reverb mix can be adjusted using the Reverb knob. The chorus has adjustable depth and speed using the Depth and Speed knobs respectively. You can choose from either single or multi-voice chorus sounds by using the Choir/Solo switch. If you want to use the reverb with the chorus off, just press the Chorus footswitch. If you don't want reverb, just turn the Reverb knob down and the effect will be disabled.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

Controls

DEPTH KNOB - Adjusts the depth of the chorus effect.

SPEED - Adjusts the speed of the chorus effect.

REVERB - Adjusts the reverb mix level.

CHOIR/SOLO Switch - Selects between multi-voice and single voice chorus.

CHORUS Footswitch - Turns on and off the chorus effect.

BYPASS Footswitch - Turns on or bypasses the entire effect.

ON LED - Lit when the effect is on.

Questions or Problems? We want to help! Email support@kilpatrickaudio.com or visit our website: www.kilpatrickaudio.com for more information.

Kilpatrick
AUDIO
MADE IN CANADA

How to rock the...

Chora Lush

Thank you for buying the Chora Lush rich chorus with reverb pedal! Below are some ideas to help you understand more about how the Chora Lush can become your most useful pedal for clean and acoustic playing.

Basic Usage

The Chora Lush provides two simultaneous effects combining both chorus and reverb into a single pedal. The reverb mix can be adjusted using the Reverb knob. The chorus has adjustable depth and speed using the Depth and Speed knobs respectively. You can choose from either single or multi-voice chorus sounds by using the Choir/Solo switch. If you want to use the reverb with the chorus off, just press the Chorus footswitch. If you don't want reverb, just turn the Reverb knob down and the effect will be disabled.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

Controls

DEPTH KNOB - Adjusts the depth of the chorus effect.

SPEED - Adjusts the speed of the chorus effect.

REVERB - Adjusts the reverb mix level.

CHOIR/SOLO Switch - Selects between multi-voice and single voice chorus.

CHORUS Footswitch - Turns on and off the chorus effect.

BYPASS Footswitch - Turns on or bypasses the entire effect.

ON LED - Lit when the effect is on.

Questions or Problems? We want to help! Email support@kilpatrickaudio.com or visit our website: www.kilpatrickaudio.com for more information.

Kilpatrick
AUDIO
MADE IN CANADA

How to rock the...

Chora Lush

Thank you for buying the Chora Lush rich chorus with reverb pedal! Below are some ideas to help you understand more about how the Chora Lush can become your most useful pedal for clean and acoustic playing.

Basic Usage

The Chora Lush provides two simultaneous effects combining both chorus and reverb into a single pedal. The reverb mix can be adjusted using the Reverb knob. The chorus has adjustable depth and speed using the Depth and Speed knobs respectively. You can choose from either single or multi-voice chorus sounds by using the Choir/Solo switch. If you want to use the reverb with the chorus off, just press the Chorus footswitch. If you don't want reverb, just turn the Reverb knob down and the effect will be disabled.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

Controls

DEPTH KNOB - Adjusts the depth of the chorus effect.

SPEED - Adjusts the speed of the chorus effect.

REVERB - Adjusts the reverb mix level.

CHOIR/SOLO Switch - Selects between multi-voice and single voice chorus.

CHORUS Footswitch - Turns on and off the chorus effect.

BYPASS Footswitch - Turns on or bypasses the entire effect.

ON LED - Lit when the effect is on.

Questions or Problems? We want to help! Email support@kilpatrickaudio.com or visit our website: www.kilpatrickaudio.com for more information.

Kilpatrick
AUDIO
MADE IN CANADA

How to rock the...

Chora Lush

Thank you for buying the Chora Lush rich chorus with reverb pedal! Below are some ideas to help you understand more about how the Chora Lush can become your most useful pedal for clean and acoustic playing.

Basic Usage

The Chora Lush provides two simultaneous effects combining both chorus and reverb into a single pedal. The reverb mix can be adjusted using the Reverb knob. The chorus has adjustable depth and speed using the Depth and Speed knobs respectively. You can choose from either single or multi-voice chorus sounds by using the Choir/Solo switch. If you want to use the reverb with the chorus off, just press the Chorus footswitch. If you don't want reverb, just turn the Reverb knob down and the effect will be disabled.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

Controls

DEPTH KNOB - Adjusts the depth of the chorus effect.

SPEED - Adjusts the speed of the chorus effect.

REVERB - Adjusts the reverb mix level.

CHOIR/SOLO Switch - Selects between multi-voice and single voice chorus.

CHORUS Footswitch - Turns on and off the chorus effect.

BYPASS Footswitch - Turns on or bypasses the entire effect.

ON LED - Lit when the effect is on.

Questions or Problems? We want to help! Email support@kilpatrickaudio.com or visit our website: www.kilpatrickaudio.com for more information.

Kilpatrick
AUDIO
MADE IN CANADA